


ASSEMBLY OF WALL MIRROR MOUNTING HARDWARE



TOOLS REQUIRED:

PLIERS
CHANNEL LOCKS

- a) LOCATE WIRE, WIRE CRIMP SLEEVE, AND SLIDE CRIMP SLEEVE OVER WIRE

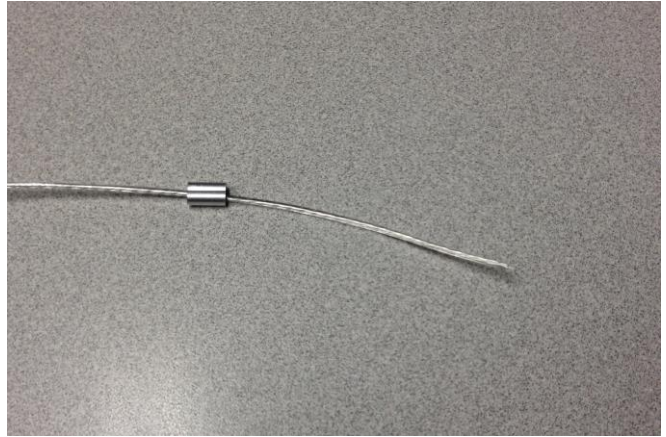

- b) SLIDE WIRE THROUGH MIRROR HANGING LOOP



- d) BEND BACK WIRE AT MIRROR HANGING LOOP & TWIST WIRE TIGHTLY NO LESS THAN FOUR TIMES



- e) SLIDE WIRE CRIMP SLEEVE OVER SHORT END OF WIRE



- f) USING PLIERS OR CHANNEL LOCKS SECURE CRIP SLEEVE IN PLACE



- g) DUPLICATE ON OPPOSITE SIDE OF WIRE – ATTACH MIRROR HANGER LOOPS TO BACK OF MIRROR FRAME WITH SELF TAPPING SCREWS PROVIDED