

ASSEMBLY OF WOOD PEDESTAL TABLE




TOOLS REQUIRED:

1/2" DEEP WELL SOCKET
#2 PHILLIPS HEAD SCREWDRIVER

- a) **OPEN TOP OF PEDESTAL BOX**
(assembled pedestal & pedestal batten enclosed)




- b) **ASSEMBLY HARDWARE ATTACHED TO BATTEN**

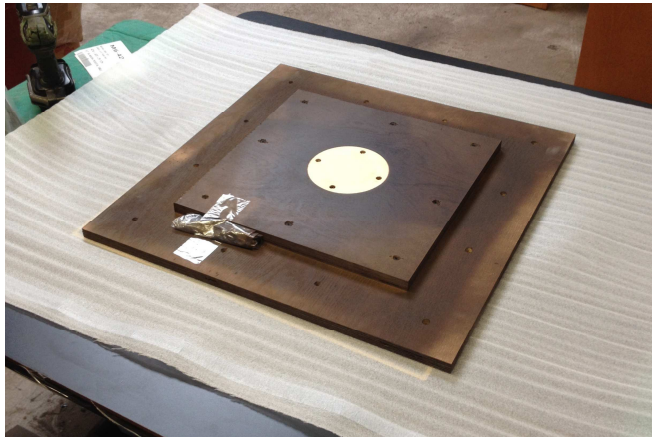

- c) **PLACE BATTEN ON TOP OF PEDESTAL**





- d) USING HARDWARE PROVIDED (Qty 4: 5/16-18 Hex Nut & Qty 4: 5/16 Flat Washer) – ATTACH BATTEN TO BASE
(requires 1/2" deep well socket)

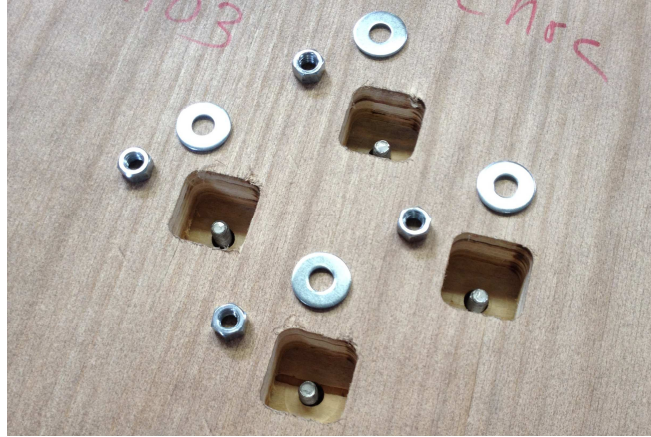

- e) INVERT TOP ONTO SOLID CLEAN WORK SURFACE



- f) FLIP PEDESTAL ASSEMBLY AND ALIGN WITH GROOVE & PILOT HOLES ON BOTTOM OF TOP

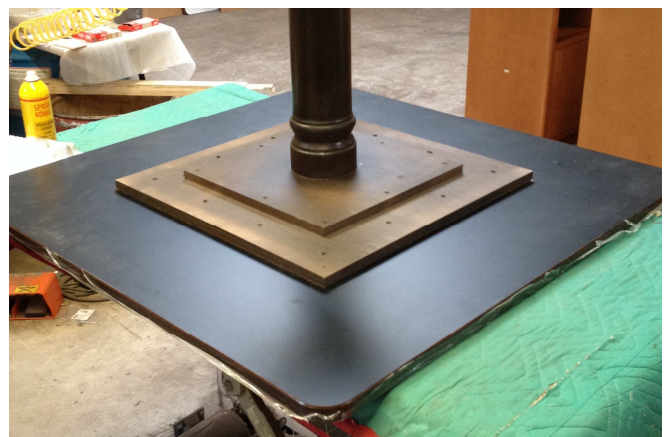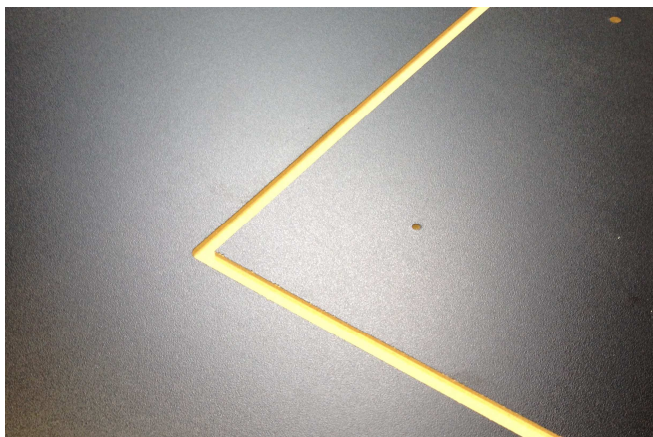

- g) USING HARDWARE PROVIDED (Qty 12: #6 x 1 1/4" Bugle Head Drywall Screw) SECURE PEDESTAL TO BOTTOM OF TOP
(requires #2 phillips head screw driver)

